


## PEUGEOT TRAVELLER

## Invitingly different - simple as that...

Lowered, accessible vehicle floor from the A- to the C-pillar provides more headroom. The PARAVAN cassette lift is as strong as an ox, ensuring safe and comfortable entry. Can be used flexibly as a solution for the driver or a front- or back-seat passenger. Optional features include the latest digital driving aids from Space Drive right through to voice control. The new PARAVAN Peugeot Traveller simply offers everything that you could want from a wheelchair-accessible vehicle.



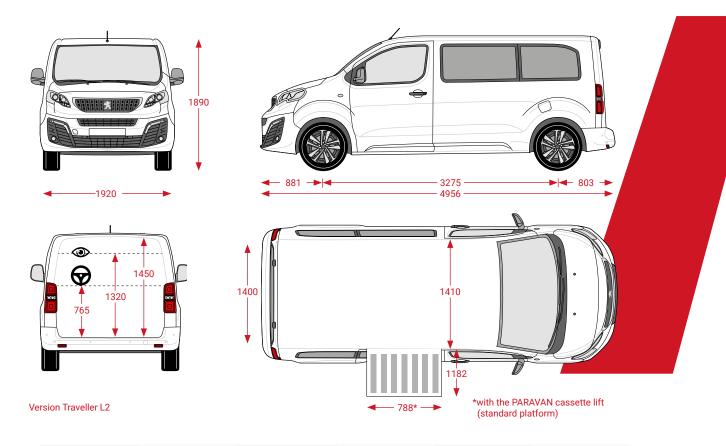

Entry height:	max. 1310 mm**	Inside height:	max. 1450 mm	Inside width:	max. 1410 mm
Ramp width:	788 mm	Eye level:	1320 mm	Ramp length:	1182 mm*

<sup>\*\*</sup> optional, standard 1285 mm

NOTE: The measurement and consumption information provided by the original manufacturer may no longer be correct after the conversion.

## YOUR BENEFITS

- Innovation und technology made by PARAVAN
- Comfortable entry thanks to the powerful PARAVAN cassette lift (lifting capacity of up to 330 kg)
- The sliding door opens quickly and easily and you can extend the lift by remote control
- Lowered floor from the A- to the C-pillar
- Hard-wearing anthracite/black carpet
- Fastenings allow a wheelchair user to be transported as either a front- or middle-seat passenger
- The driver's and front passenger seat are simple, quick and safe to install and remove thanks to PARAVAN's tried-and-tested seating system
- Flexible use of the vehicle interior

- Maximum versatility and a comfortable inside height throughout the entire interior
- Excellent value for money
- Proper boot and original 3 seat bench in the rear
- Space Drive® II digital driving and steering system (optional)
- PARAVAN transfer seat base (optional)
- PARAVAN docking station on the driver's and front passenger side (optional)
- PARAVAN Touch system and Voice Control (optional)

